

Gladiator®



MECHANICS UTILITY SEAT & 3 DRAWER TOOLBOX

MODEL NO: CMUS3-B

PART NO: 7630139

USER INSTRUCTIONS

DL0525 -rev 1

INTRODUCTION

Thank you for purchasing this CLARKE product. Before attempting to use the product, it is essential that you read this manual thoroughly and carefully follow all instructions given. In doing so you will ensure the safety of yourself and that of others around you, and you can also look forward to the product giving you long and satisfactory service.

SAFETY PRECAUTIONS

1. Use your mobile seat for any task where you would normally sit or kneel. Place on level ground and the floor surface is hard enough that the castors do not sink in.
2. **DO NOT** leave the mobile seat where it may become a trip hazard.
3. Have any damaged parts repaired or replaced immediately. Use genuine CLARKE parts only. The use of unauthorised parts may be dangerous and will invalidate the guarantee.
4. **NEVER** climb on, stand on, or attempt to ride on the mechanic's seat or use it to transport heavy objects.
5. **DO NOT** exceed the safe working load of the seat (150kg/330lbs).

SPECIFICATIONS

The seat has 3 drawers with ball bearing runners built in and 3 circular holders for aerosol cans. The drawers have a length of 300mm with a width of 150mm and depth of 37mm. The aerosol holders are 70mm in diameter with a depth of 50mm.



Dimensions (D x W x H, Incl. Casters)	410mm x 365mm x 390mm
Weight	8.1 kg
Safe Working Load (inc drawers)	Total 150kg/330lbs

UNPACKING & ASSEMBLY

Unpack and lay out all components, checking for any damage which may have occurred during transit and ensuring that all parts are accounted for by checking against the parts list. Should there be any deficiency or damage, please contact your CLARKE dealer immediately.

COMPONENT PARTS


1	1 x Seat frame c/w 3 drawers
2	1 x Tool Tray
3	4 x M8 socket nuts
4	4 x Castor wheels

ASSEMBLY

1. Place the tool tray in the slot on the side of the seat frame.
2. Fit the socket nuts into the holes on each corner of the frame and screw the castor wheels to the nuts.
 - The nuts on the tool tray side clamp the tray to the frame.

Check that all nuts are tight and secure before using this seat.

Your mobile seat is now ready for use.

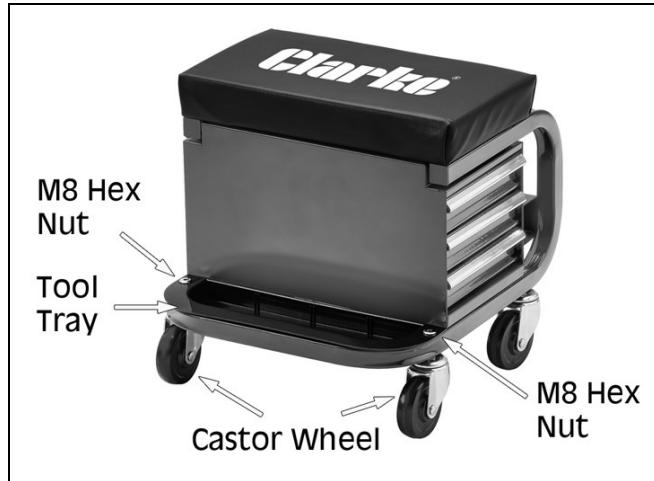

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose. Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

A SELECTION FROM THE VAST RANGE OF

Clarke® QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE:

0208 988 7400

Parts Enquiries

Parts@clarkeinternational.com

Servicing & Technical Enquiries

Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com